

GAPW SERIES GAS ALARM PANELS


GENTEC® **GAPW** series gas alarm panel is designed to simultaneously monitor two gas supply systems. When the pressure is lower than set pressure, light-indicated and audible alarm will be triggered to inform operator to check.



Features


- Two-input dry contact signal (electronic contact gauge or pressure switch)
- Aluminum alloy cover with compact design of 88*38*120 mm
- Extra safety with external DC 24V adapter power supply
- Sound and light alarm indication, adjustable alarm sound
- The audible alarm can be muted by the silence button
- When one alarm signal is alarmed and muted, the activation of the other alarm signal will not be hindered
- Built-in PCB board plug-in blocks to facilitate input and output signal lines connection
- Optional strobe light for distance sound and light alarm
- Rated IP51 Enclosure: Protected from limited dust ingress and dripping water

Dimensions

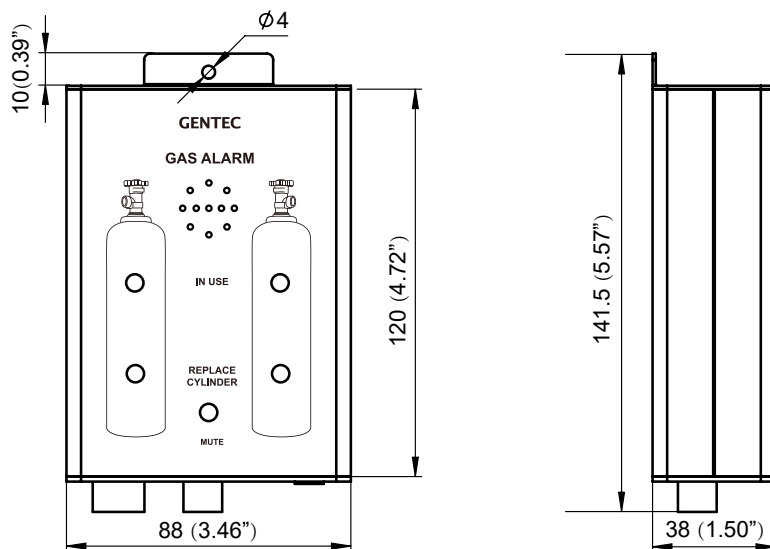

Note: dimensions in mm (in.)

Application

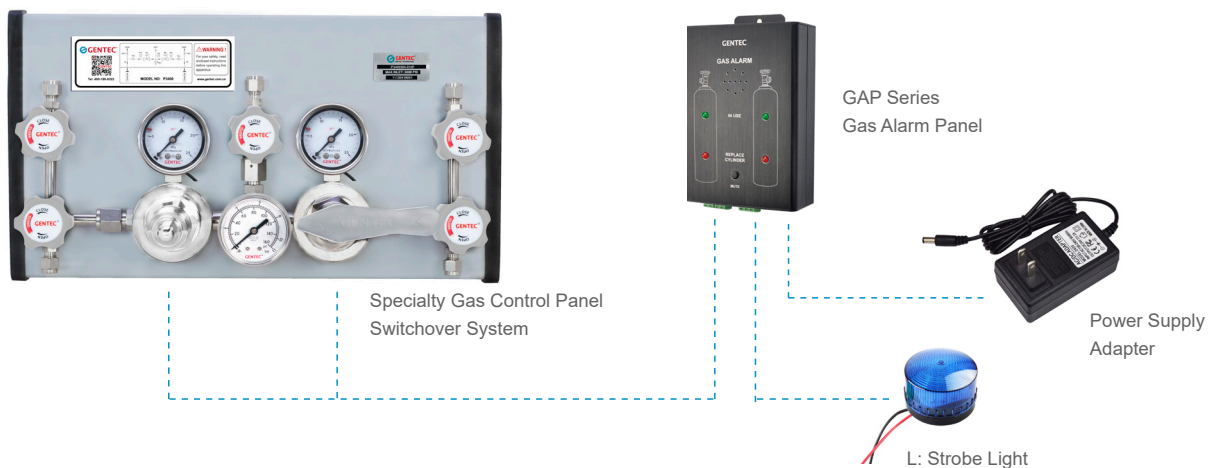

Ordering Information

EX:	GAP	- 02	- DC 24V	- L
	Series	Monitoring Gas Channels	Voltage	Outlet Type
	GAPW Series Gas Alarm Panel	02: 2 Gases	DC 24V (2A)	None: without Strobe Light, without Output Voltage L: with Strobe Light V: without Strobe Light, with Output Voltage DC 24V 1.5A only