The Compact Torch™ Kits

HVAC & Plumbing









The Compact Torch™ Kits

GENTEC® COMPACT TORCH™ gets you into tight spaces and allows you to do more precise work than any other torch on the market! The Compact Torch's small size, chrome-plated brass torch handle with stainless steel internal tubing and copper tips provides the durability one needs. The easily maneuverable 12-foot extra flexible twin hoses have "B" fittings for larger regulator connections. The Compact Torch™ is perfect for soldering and brazing jobs in HVAC & Plumbing industries. "A" fitting adaptors for light/medium duty regulators are included with Kits without regulators. Optional torch tips can be used for Oxy-Acetylene, Oxy-Propane or Oxy-MAPP® gases.

- Lightweight durable construction with chrome-plated brass body and stainless steel inner gas tubes
- Easy manipulation in tight spaces
- Tips have double o-ring seats to ensure leak-proof connections
- Designed to braze and solder the smallest jobs up to 1-1/4" copper tubing
- Oxy-Acetylene and Oxy-Fuel Kits
- Durable and extra flexible hoses with "B" connections ("A" adaptors included in Kits without regulators)



Oxy-Acetylene Anti-Theft Packaging Kit with Cylinders

Model Number	KCMA16TCSP	
GAS SERVICE:	OXY-ACETYLENE	
TORCH HANDLE:	10CM	
TIPS:	10CMP-GMTT 10CMP-GMTR 10CMP-4 10CMP-6	
TWIN HOSES:	HST18-12 (12')	
OXYGEN REGULATOR*:	710X-80G	
ACETYLENE REGULATOR*:	710Y-15G	
OXYGEN CYLINDER:	CY20-540	
ACETYLENE CYLINDER:	CY10-MC	
TANK WRENCH:	27-0005	
CYLINDER CARRIER:	CRT10	
CHECK VALVES:	24-CV9PR	

^{*}This regulator comes with gauge guards



KCMA16TCSP

Oxy-Acetylene & Oxy-Fuel Kits







KCMA16SP KCMA26SP KCMA04SP

Model Number	Gas Service	Torch Handle	Tips	Hose	Oxygen Regulator	Fuel Regulator	B to A Hose Adapters	Check Valves
KCMA04SP	ACET./PROP./MAPP®	10CM	10CMP-4	HST18-12	N/A	N/A	24-0105/24-0106	N/A
KCMA26SP	ACET./PROP./MAPP®	10CM	10CMP-GMTT, 10CMP-GMTR, 10CMP-4, 10CMP-6	HST18-12	N/A	N/A	24-0105/24-0106	N/A
KCMA16-BSP	ACETYLENE	10CM	10CMP-4	HST18-12	710X-80	710Y-15-5	N/A	24-CV9PR
KCMA16SP	ACETYLENE	10CM	10CMP-GMTT, 10CMP-GMTR, 10CMP-4, 10CMP-6	HST18-12	710X-80	710Y-15	N/A	24-CV9PR
KCMP16SP	PROPANE/MAPP®	10CM	10CMP-GMTT, 10CMP-GMTR, 10CMP-3, 10CMP-7	HST18-12	710X-80	710F-80	N/A	24-CV9PR

Compressed Gas Regulators

Model Number	Gas Service	Inlet Connection	Outlet Connection	
710X-80	OXYGEN	004540 DEAD	0/40% 40011/84)	
710X-80G	OXIGEN	CGA540 REAR	9/16"-18RH(M)	
710Y-15-5	ACETYLENE	CGA520 REAR	9/16"-18LH(M)	
710Y-15	ACETYLENE	CGA200 "MC" REAR	9/16"-18LH(M)	
710Y-15G	ACETTLENE	CGAZUU MC REAR	9/10 -16LH(NI)	
710F-80	PROPANE/MAPP®	CGA510 REAR	9/16"-18LH(M)	





Oxy-Acetylene/Oxy-Fuel Torch Handle - 10CM Series

Model Number	Gas Service	Description
10CM	OXY-ACET./FUEL	TORCH HANDLE ONLY
10CM-H12	OXY-ACET./FUEL	TORCH HANDLE w/12' HOSE



Replacement Twin Hoses (Includes Hose Clamps)

ı	Model Number	Gas Service	Dimension	Connection
	HST18-12	OXY/FUEL(TWIN)	1/8"x12'	9/16"-18RH/LH(M)

Replacement Hose Clamps

Model Number	Description
007-505R	SMALL HOSE CLAMP



HST18-12

Oxy-Acetylene/Oxy-Fuel Tips


Model Number	Size	Gas Service
10CMP-2	2	OXY-ACETYLENE
10CMP-3	3	OXY-ACETYLENE/PROPANE/MAPP®
10CMP-4	4	OXY-ACETYLENE/PROPANE/MAPP®
10CMP-5	5	OXY-ACETYLENE/PROPANE/MAPP®
10CMP-6	6	OXY-ACETYLENE/PROPANE/MAPP®
10CMP-7	7	OXY-ACETYLENE/PROPANE/MAPP®
171W-000	000	OXY-ACETYLENE
171W-00	00	OXY-ACETYLENE
171W-0	0	OXY-ACETYLENE



171W


Brazing Tip Comparison Chart

Model Number	Brazing Tip Capacity For Copper	W-J Comparison
10CMP-2	1/8"-1/4" (3-6mm)	N/A
10CMP-3	1/8" - 1/2" (3-12mm)	000
10CMP-4	1/8" - 3/4" (3-19mm)	00
10CMP-5	1/4" - 7/8" (6-23mm)	0
10CMP-6	1/4" - 1" (6-26mm)	1
10CMP-7	3/8" - 1 1/8" (10-29mm)	2
10CMP-GMTT	1/4" - 1" (6-26mm)	N/A
10CMP-GMTR	3/8" - 1 1/4" (10-32mm)	N/A

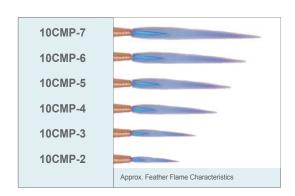

Multi-Flame Rosebud Heating Tip

Model Number	Gas Service
10CMP-GMTR	OXY-ACET./PROPANE/MAPP®



Twin Tip

Model Number	Gas Service
10CMP-GMTT	OXY-ACET./PROPANE/MAPP®



Tip Combo Pack (Skin Package)

Model Number	Tips	Gas Service	
	10CMP-GMTT (Twin Tip)		
10CMP-C3SP	10CMP-GMTR (Multi-Flame)		
10CMP-C35P	10CMP-3 (Curved Tip #3)	OXY-ACET./PROPANE/	
	10 CMP-7 (Curved Tip #7)		
	10CMP-GMTT (Twin Tip)	MAPP®	
10CMP-C4SP	10CMP-GMTR (Multi-Flame)		
	10CMP-4 (Curved Tip #4)		
	10 CMP-6 (Curved Tip #6)		

Replacement O-Rings for 10CMP

Model Number	Description
T110-26	LARGE O-RING
T110-27	SMALL O-RING

MAPP® is a registered trademark of BOC Group, Inc., which is not associated with Genstar Technologies Co., Inc.

